

LED Light Chart for Setting Time on adaez Door Operators

POSITION	POSITION OF LED'S				SECONDS
1	●				1
2		●			2
3			●		3
4				●	5
5	●	●			8
6	●		●		12
7	●			●	16
8	●	●	●		20
9	●	●		●	26
10	●	●	●	●	30

To enter programming mode press and hold SELECT and ENTER buttons for 3 seconds.

After entering the PROGRAM mode and selecting the feature you would like to change, slowly rotate the potentiometer and following the corresponding lights as shown above. To save that setting momentarily press the ENTER button. When all settings are programmed, press and hold ENTER for about 3 seconds to lock in and exit the programming mode.

This information compliments of; *EZ Door Opener LLC*



Please consider the environment before printing